andrew james

# Slow Juicer

Please read the manual fully before using the appliance and keep the manual safe for future reference.

# Contents page


| | |
|---|---|
| Appliance safety | Page 3 |
| Appliance components illustration | Page 5 |
| Assembling the appliance | Page 6-7 |
| Using the juicer | Page 8 |
| Disassembling the appliance | Page 9 |
| Cleaning & maintenance | Page 10 |
| Troubleshooting | Page 11 |
| Recipes | Page 12 |
| Electrical information | Page 14 |
| UK & EU Guarantee | Page 15 |
| Disposal of the appliance | Page 16 |
| Contact details | Page 17 |

**Appliance safety**

When using any electrical appliance, basic safety precautions should always be followed including:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged, it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas, electric burners or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However if it is necessary to use an extension cord, ensure that the extension cord is equal to or greater than the power consumption of the appliance to avoid overheating of the appliance and extension cord. Do not use any other appliance on the extension cord. Do not place the extension cord in a position where it can be pulled on by children or animals or be tripped over.
- Always operate the appliance on a smooth, even and stable surface. Do not

place the unit on a hot surface.

- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the appliance with wet hands.
- When passing the appliance onto a 3rd party please include the instruction manual.
- Keep hands and utensils out of the slow juicer, a scraper may be used but only when the slow juicer is switched off at the mains.
- Do not let the appliance become immersed in water or any liquid for any reason.
- Before the machine is cleaned, moved or if it is not in use, please turn the appliance “Off” and remove the plug from the power supply.
- Only use the pusher to push food down the hopper of the appliance.

**Appliance components illustration**

| | |
|---|---|
| 1. Pusher | 6. Juice spout |
| 2. Hopper | 7. Pulp spout |
| 3. Strainer | 8. Juice jugs |
| 4. Strainer holder | 9. Pulp jug |
| 5. On/Off knob | 10. Motor unit |

**Assembling the appliance**

1. Place the motor unit (10) onto a flat secure surface ensuring that the suction feet stick to the work surface.
2. Fit the attachment with both the Juicer spout (6) and pulp spout (7) onto the motor unit (10) so that the three securing locks on the motor unit fit correctly.
3. Attach the spiral juicer attachment into the strainer (3) and fit the strainer holder (4) onto the outside of the strainer.
4. Once the attachments are fitted together correctly, place them into the spout unit so that the spiral attachment slots into the hole in the motor unit (10).
5. Fit the hopper plate onto the top of the unit and rotate it clockwise to ensure it is locked into position.
6. Place the pulp jug (9) and juice jug (8) under the appropriate spouts (6 & 7).

**Important**

If the hopper (2) and unit are not correctly assembled the juicer will not operate due to a safety feature.

**Using your juicer**

The juicer is suitable for foods such as celery, spinach, carrots, apples, bananas, tomatoes, cucumbers and pears. It is essential that the juicer extracts as much juice from fruits and vegetables as possible, therefore avoid using fruits and vegetables that are high in starch as they tend to absorb moisture. Also make sure that all fruit and vegetables are cleaned thoroughly, ready for juicing.

1. When juicing fruit with stones or hard seeds, pit the fruit. Remove any hard inedible skin from fruit i.e. from melons, pineapples and mangoes prior to juicing.
2. Chop the fruit into small pieces.
3. Place the appliance on a safe, secure flat work surface.
4. Assemble the appliance according to “assembling” the appliance.
5. Turn the appliance to “On”.
6. Feed the fruit down the hopper (2) using the pusher (1) provided.
7. When juicing is complete turn the appliance off at the mains and wait for a cooling down period before cleaning the appliance.
8. Disassemble the appliance and clean according to “Cleaning and maintenance”.

**Note:**

If the appliance becomes jammed please turn the control to “R” for ten seconds.

**Disassembling the appliance**

1. Turn the power “Off” and unplug the appliance form the mains.
2. Rotate the hopper (1) counter clockwise and remove the attachments inside of the unit.
3. Remove the spout unit by lifting it up.
4. Remove the spiral attachment and all other attachments from one another.

**Cleaning & Maintenance**

- All removable parts of the appliance should be washed in warm soapy water, rinsed and then dried before storing. They are not dishwasher proof.
- Regularly clean the outside of the appliance with a soft damp cloth and dry it with a towel.
- Store the appliance in a clean and well ventilated place.
- **After storing the appliance for a long period of time without using it, it is essential to clean all parts of the appliance before beginning the juicing process.**
- The rubber pads at the bottom of the squeezing cup can be washed with a damp wet cloth.

## Troubleshooting

| Problem | Cause | Troubleshooting method |
|---|---|---|
| The running machine stops suddenly | • Check to see if the power plug is properly inserted<br>• The quantity of materials put into the machine is too large.<br>• Hard fruits and vegetables are not cut small enough | • Insert the plug correctly<br>• Press “R” for 2-3 seconds then “ON” (repeat the process). If it still does not run please clean the machine and try again.<br>• Hard fruits and vegetables should be cut into smaller pieces . |
| The juice amount is small or juice flows out of the main frame | • Dry materials stored in refrigerator are used for squeezing | • The juice amount will increase if the materials are squeezed after being immersed in clear water for sufficient water absorption |
| There is an abnormal noise | • Accessories are not properly installed<br>• The machine is put on a non smooth surface<br>• Parts cause extrusion sound during squeezing | Ensure the accessories are installed properly<br>Please put the machine on a flat surface<br>Due to the extrusion of vegetables |
| The container and accessories are dyed after use | | Wash according to the cleaning instructions |

**Recipes**

All recipes follow the same method. Remove hard skins and pits from fruit and vegetables that require it.

Place the ingredients in the food chute ensuring that it does not overflow.

**Fantastic fennel**

- Cucumber (1/2)
- Fennel (small square approx. 6cm)
- Apples (3)
- Limes (2)

**Lemony Apple**

- Apples (2)
- Lemon (1)
- Slice of ginger (1 large)

**Plain Orange juice**

- 4 medium sized oranges

**Tropical treat**

- Watermelon (2 slices)
- Pineapple (3 chunks)
- Mango (1 large)
- Orange (1 large)
- Limes (1 large)

**Top secret**

- Carrots (5-6)
- Handful of turnip
- Kale leaf (1)
- Apple (1)
- Kiwi fruit (2)

**Mighty muscles**

- Spinach (5 large handfuls)
- Cucumber (1)
- Carrots (3)

**Sweet & sour**

- Grapefruit (1/2)
- Apples (2)

**Popeye juice**

- Spinach (1 cup)
- Cucumber (1/2)
- Celery (2 stalks)
- Carrots (3)
- Apple (1/2)

**Electrical information**

**Please note:**

It is extremely important that the wires or cores in the flex are connected to the correct terminals in the plug. If the colour of the mains lead of the appliance does not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

- The **Live** (**Brown**) wire connects to the right-most live (L) terminal nearest to the fuse.
- The **Neutral** (**Blue**) wire connects to the left-most neutral (N) terminal.
- The **Earth** (**Green and Yellow**) wire connects to the central, top most earthed (**E**) terminal.

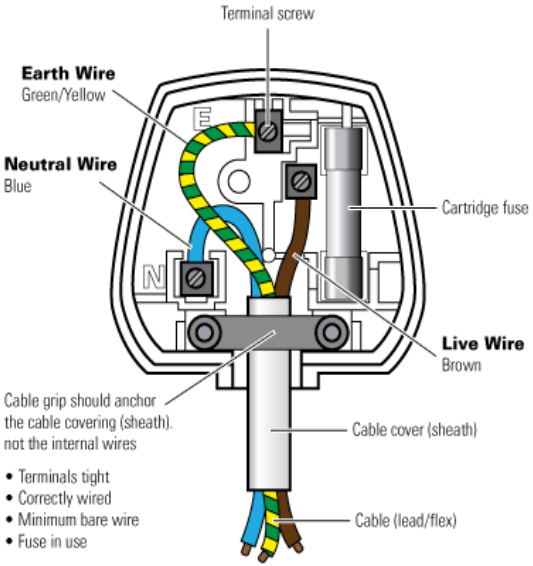


**Warning**:

If the appliance is double insulated indicated by the double insulated symbol:

it should not have an earth wire or earth connection.

**Plug**

The plug must be protected by the correct AMP fuse; this will be indicated on the case of the plug. Only BSI or ASTA approved fuses should be used. When changing the fuse always replace it with a fuse that is of the same identical rating as the original. If you are unsure about which plug or fuse to use, always refer to a qualified electrician.

Please note after replacing the fuse, ensure that the cover is correctly fitted back onto the plug. Never attempt to run the appliance if the plug does not have a cover.

If a moulded plug is fitted and has to be removed take great care in disposing of the

plug and severed cable, it must be destroyed to prevent it from engaging into a socket. If the supply cord is damaged it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.

All of our electrical appliances conform to pre-existing EC Directives 2006/95/EC (Low Voltage Directive) and 2004/108/EC (EMC Directives).

For further information please visit http://www.esc.org.uk/industry/product-safety/product-testing-screening/kitchen-appliances/

**UK and EU Guarantee**

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is for domestic use only and is not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to www.andrewjamesworldwide.com

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

**Disposal of the appliance**

**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!**

Correct disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return

your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.